

MANOMETRO D. 63 ATTACCO RADIALE 1/4



CODICE	A	Scala Bar
M635RL-10	1/4	-1/0
M635RL01	1/4	0/1
M635RL01,6	1/4	0/1,6
M635RL-11,5	1/4	-1/+1,5
M635RL-13	1/4	-1/+3
M635RL-15	1/4	-1/+5
M635RL-19	1/4	-1/+9
M635RL02,5	1/4	0/2,5
M635RL04	1/4	0/4
M635RL06	1/4	0/6
M635RL012	1/4	0/12
M635RL016	1/4	0/16
M635RL025	1/4	0/25
M635RL040	1/4	0/40
M635RL060	1/4	0/60
M635RL080	1/4	0/80
M635RL0100	1/4	0/100
M635RL0160	1/4	0/160
M635RL0250	1/4	0/250
M635RL0315	1/4	0/315
M635RL0400	1/4	0/400
M635RL0600	1/4	0/600
M635RL01000	1/4	0/1000

MANOMETRO D. 63 ATTACCO POST. 1/4



CODICE	A	Scala Bar
M638PBL-10	1/4	-1/0
M638PBL01	1/4	0/1
M638PBL01,6	1/4	0/1,6
M638PBL-11,5	1/4	-1/+1,5
M638PBL-13	1/4	-1/+3
M638PBL-15	1/4	-1/+5
M638PBL-19	1/4	-1/+9
M638PBL02,5	1/4	0/2,5
M638PBL04	1/4	0/4
M638PBL06	1/4	0/6
M638PBL012	1/4	0/12
M638PBL016	1/4	0/16
M638PBL025	1/4	0/25
M638PBL040	1/4	0/40
M638PBL060	1/4	0/60
M638PBL080	1/4	0/80
M638PBL0100	1/4	0/100
M638PBL0160	1/4	0/160
M638PBL0250	1/4	0/250
M638PBL0315	1/4	0/315
M638PBL0400	1/4	0/400
M638PBL0600	1/4	0/600
M638PBL01000	1/4	0/1000
M638PBLST	Staffa	Supporto

MANOMETRO D. 100 ATTACCO POST. 1/2



CODICE	A	Scala Bar
M108PBL-10	1/2	-1/0
M108PBL01	1/2	0/1
M108PBL01,6	1/2	0/1,6
M108PBL-13	1/2	-1/+3
M108PBL02,5	1/2	0/2,5
M108PBL04	1/2	0/4
M108PBL06	1/2	0/6
M108PBL012	1/2	0/12
M108PBL016	1/2	0/16
M108PBL025	1/2	0/25
M108PBL060	1/2	0/60
M108PBL0100	1/2	0/100
M108PBL0160	1/2	0/160
M108PBL0250	1/2	0/250
M108PBL0400	1/2	0/400
M108PBL0600	1/2	0/600
M108PBLST		Staffa Supporto